

5804

Battery Replacement



1. Put your alarm system into the TEST mode by entering your user code plus the number 5 (TEST) on the keypad. The alarm sander will go off momentarily. While the alarm system is in the TEST mode, the keypad will beep every 30 seconds.



2. Place the case, buttons down, on work surface. Remove case back by inserting the blade of a small flat head screwdriver into the seam around the case and prying the case open. Leave the circuit board assembly in the case front, buttons down.



3. Remove the existing batteries by carefully lifting them out with a small screwdriver.



4. Push new batteries into the case back locations. Be sure to observe the proper positive/negative placement.



5. Close by snapping case front and back together.

6. Activate device by pressing any button. The keypad will beep 3 times confirming reception.

7. Exit the alarm system TEST mode by entering your user code plus the number 1 (OFF). Low battery message should disappear.